

Shock Alarm System

Mount your alarm in the cab area and secure to bulk head, position in a upright position failure to mount it this way up will result in the shock sensor not able to work as intended, the alarm control box will detect shocks better if it is secured to a metal surface.



To operate the alarm press the O button on remote you will hear 2 x bleeps from siren telling you that your alarm is activated, press the button again and you will hear 1 x beep from siren telling you it's deactivated.

Once the alarm is activated if it senses an attack on the van it will sound the sirens, this will continue for 60 seconds, after this the alarm will stop and it will reactivate itself to the protected mode, to disarm the alarm press button again and it will deactivate.



Shock Alarm sensitivity adjustment

Only Use the screw driver provided as it has been shaped to be inserted into the sensor hole, be very careful when inserting screw driver, you must feel for the little slot do not put too much pressure when inserting into hole, only very slight adjustments are needed, turn to the - to decrease sensitivity turn to the + to increase sensitivity.



