

## **Installation of Moholock**

**Moholock should be connected to 12volts only and should be connected to the leisure batteries on the Motor Home Live and Earth. The draw on the batteries is just 20 mA amp. There is a 3amp inline fuse added.**

**To enable you to get to the leisure batteries it may be easier to drill hole in floor and pass cable through then run cable along chassis then drill another hole to pop up in the battery area, please use silkaflex 522 to seal the holes inside and out, you will need to drill a 12mm hole to do this.**

**As per illustrated drawings the mounting of the actual Moholock should be 13mm down from the edge of the opening please see drawings.**




**You may have to trim the inside door rubber so the lock can fully work without any restriction i.e. the moving parts of the lock should not be hindered in anyway.**



**The main control box should be mounted to the inside rear wall of the motor home in a central position to the garage doors, by installing this way it's easier to run the wire harnesses to the Moholocks.**

**With the coiled cable coming from the moholock it must be secured to the inside of the bodywork on the motor home using cable clips supplied.**

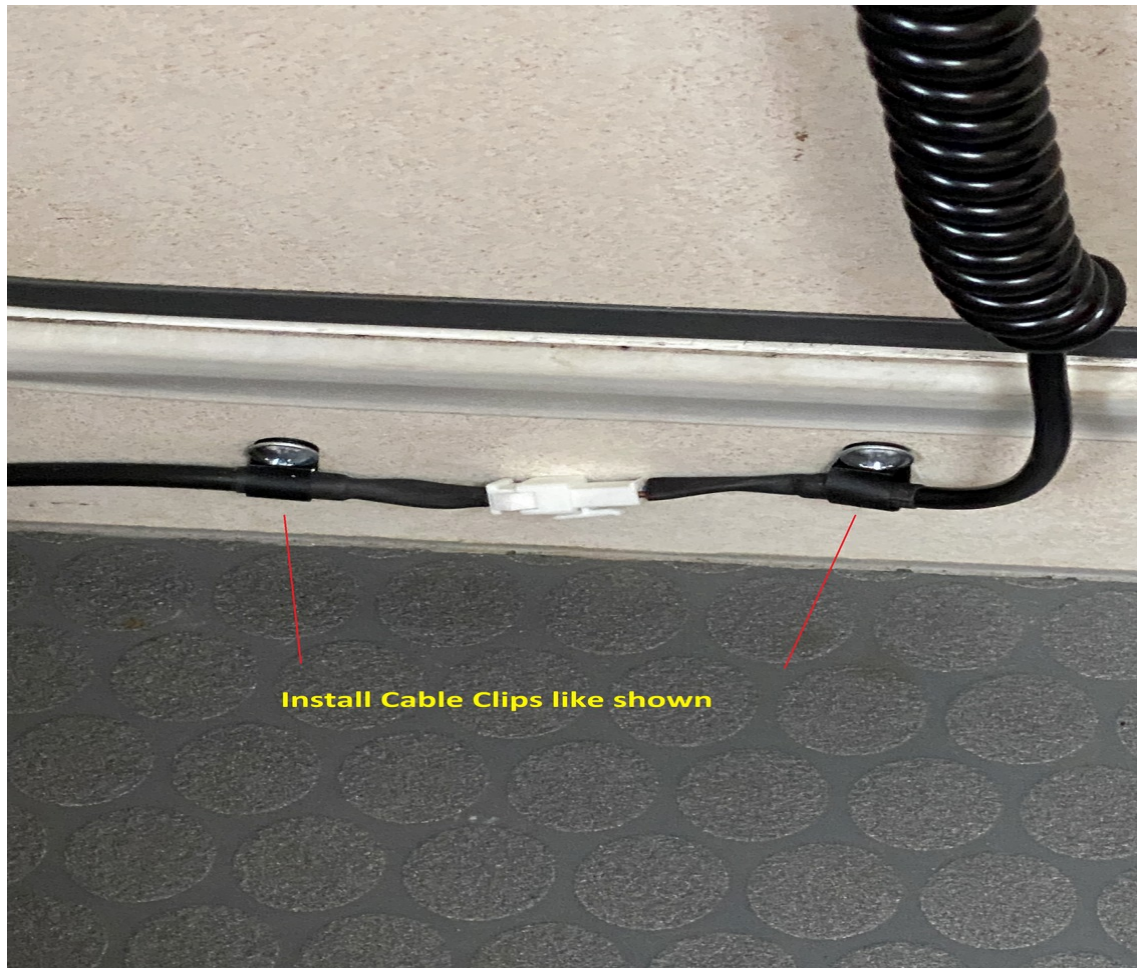

**this will keep the cable from snagging when opening and closing door as it will expand on opening and return back to being coiled when in the closed position.**

**Please use the screws provided to secure the Moholock to the back of the doors as they have been carefully selected for this purpose.**